

digital timer instructions

- 1) set timer by pressing the clock/timer button.
- 2) choose the minute (m) or hour (h) button and turn knob clockwise to set desired time.
- 3) if time needs to be removed, turn knob counter clockwise to desired time.
- 4) press the start/stop button and countdown will begin. to stop timer, press start/stop button. to set timer again, repeat process.


clock:

- 1) to set clock, press and hold the clock/timer button for three seconds until time flashes.
- 2) press the h button to set the hour by turning the knob clockwise to the correct hour.
- 3) next, press the m button to set the minutes by turning knob clockwise to the correct minute.
- 4) if time needs to be removed, turn knob counter clockwise to desired time. when correct time is set, press the set button and then the current time is now displayed.

at any time, pressing the set button will toggle between the current time and timer.

control buttons

- (a) h hour display
- (b) m minute display
- (c) ▶ timer start/stop
- (d) ⌚ clock/timer mode
- (e) knob set timer or clock

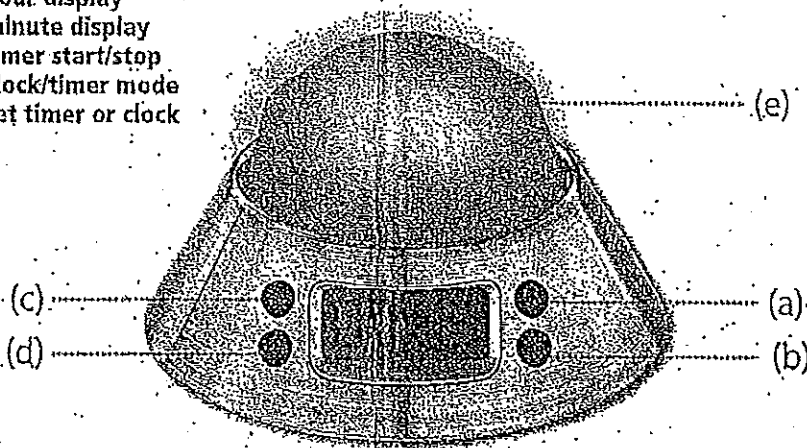

8879